 


# Lagenda Junior Inflator

Main for twisting balloon & 5" balloon

Item No. : B231

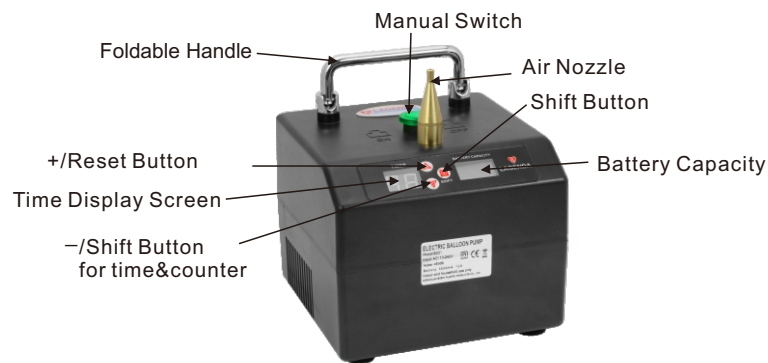

## 1.IMPORTANT

- ★ Power adapter voltage is AC110V-240V.
- ★ Input is DC 13.8V, charging time should be upon 8 hours.
- ★ This air inflator is used to inflate a balloon, over 2 hours of continuous use may cause the motor to overheat and damage it.
- ★ This is not a toy, to avoid contact with children.
- ★ Do not block the air outlet, making them always remains in the ventilated state.

## 2. WARNING

- ★ For your safety, when the power cord is damaged, please contact relevant staff.
- ★ Do not store or use the air inflator in humid environment.
- ★ When you do not use or leave the air inflator, please turn off the switch and remove the plug.
- ★ When you use the air inflator, to avoid impurities be inhaled into the inflator .
- ★ If the air inflator is damaged, stop using and contact the manufacturer
- ★ Regular maintenance the air inflator, ensure power on or use within three months.
- ★ When air inflator be using, do not face toward the inflator .

Please read carefully and follow up the instructions & warnings before use


- ★ To ensure the service life, if unused for long periods, every other week to charging or discharging the air inflator. If unused for a long periods of inflators and there have no charge or discharge, it will damage the battery.

## 3.OPERATIONS

- ★Taken the air inflator from the box, turn on the switch.
- ★Put the balloon on the copper nozzle and press the green button lightly for air inflation, then release the button to stop inflating.
- ★If the battery is out of charge, please insert the plug into the socket and turn on the switch to charge the battery, the inflator can work while charging.
- ★Please turn off the switch after finish the air inflation.


## Time Function

- ★Press ⊕ button one time: select the type of time to 0.1 seconds, press ⊕/⊖ button to set the inflation time.
- ★Press ⊕ button one time: select the type of time to 1.0 seconds, press ⊕/⊖ button to set the inflation time.
- ★Press ⊕ button three times : confirm the inflation time.
- ★Long press ⊕ button three seconds: clear the inflation time and counter quantity.
- ★Press ⊖ button: shift time and counter function.

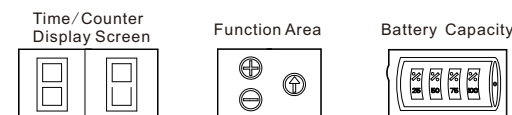

## Special function

- ★If you have two inflators, the two inflators can connect together to use at the same time.
- ★Control one of the inflator to inflate balloons with the same size or adjust the time of the two inflators separately to inflate balloons with different size.

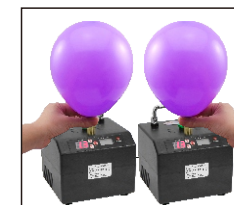

# 宝诺传奇气球充气泵

型号：B231



## 1. 注意事项

- ★ 电源适配器电压为：AC110V-240V。
- ★ 充气机充电为：DC 13.8V, 充电时间为8小时以上。
- ★ 这个充气泵用于给气球充气，连续使用超过两小时可能会导致电机过热并损坏充气泵
- ★ 这不是一个玩具，避免与儿童接触。
- ★ 不要堵塞充气口，使它们一直保持通风状态。

## 2. 警告

- ★ 为了您的安全，当电源线被损坏时，请及时联系相关工作人员。
- ★ 不要储存或在潮湿的环境下使用充气泵。
- ★ 当您不使用或离开充气泵时，请随手关掉开关并拔出插头。
- ★ 当您在使用充气泵时，避免杂质被吸入充气泵内。
- ★ 如果充气泵被损坏了，请停止使用并与厂家联系。
- ★ 请定期维护充气泵，保证三个月内充电或使用一次。
- ★ 当充气泵在使用时，不要把充气口对着眼睛。

## 使用前请阅读以下操作说明及注意事项

- ★ 为确保充气机的使用寿命，如果长期不使用，请每隔三个月对充气机进行正常充电一次。长期不使用充气机且不进行充电，将会损坏率气机的电池。

## 3. 操作说明

- ★ 将工具包内取出的充气机，打开开关。
- ★ 将气球放在铜嘴上面，轻微的按压绿色开关充气，然后松开开关，停止充气。
- ★ 当电池没电了，请插上插头并打开开关充电，充电的同时也可以使用充气泵。
- ★ 当完成充气，请关掉开关。

## 4. 功能操作说明

- ★ 按⊕键一次：切换到0.1秒时间，按⊕/⊖键，调出您想要的时间
- ★ 按⊕键二次：切换到1.0秒时间，按⊕/⊖键，调出您想要的时间
- ★ 按⊕键三次：确定时间
- ★ 长按⊕键三秒：时间及数量清零
- ★ 按⊖键：切换时间及记数功能



## 5. 特殊功能

- ★ 两台充气泵通过连接数据线后，调整两台充气泵的时间，控制其中一台充气泵，可以充相同尺寸的气球或不同尺寸的气球。

